

# API KEYPAD

## Seggar Flasher Portable Plus



**PTI** SECURITY  
SYSTEMS

---

**ASSA ABLOY**

2025

# AP1 KEYPAD

## Seggar Flasher Portable Plus Manual

Sales: +1.800.523.9504  
Support: +1.866.240.7602  
Web: ptisecurity.com  
Rev A- July 2025

### VERSION 1.0

#### Introduction

The Seggar Flasher Portable Plus is a programming device provided by PTI Security Systems to facilitate firmware upgrades on **AP1 keypads** that are connected to **Falcon XT** controllers. These instructions will walk you through the field upgrade process to ensure your keypad is running the latest firmware version.

 
### Before You Begin

- Charge the Flasher - Ensure the Seggar Flasher is fully charged. A charging cable is included in the case.
- Required Tool - A T15 Torx driver is required to open the keypad enclosure.

### Upgrade Process

#### 1. Access the AP1 PCBA

- Use the T15 driver to loosen the two captive screws on the AP1 keypad faceplate.
- Gently lower the faceplate to expose the internal Printed Circuit Board Assembly (PCBA).
- Locate the 10-pin programming header (indicated by the red arrow in the image).

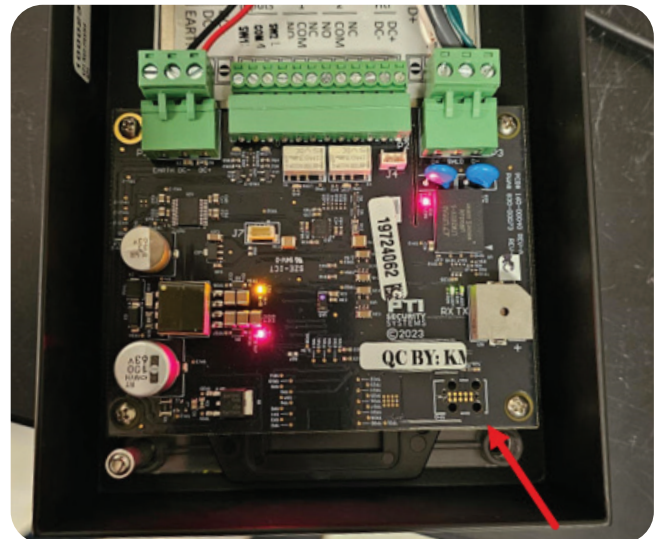


# API KEYPAD

## USER MANUAL | SEGGAR FLASHER


### 2. Connect the Segger 10-Pin Cable

 - Use the provided 10-pin keyed connector to attach to the AP1 programming header.
- The connector is keyed and will only fit in one direction. Ensure proper alignment by matching the notches and pins (see image).

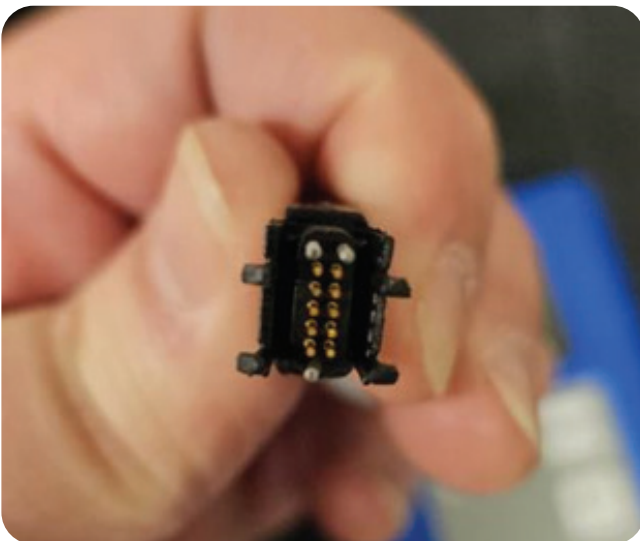

- Secure the connection by pinching the plastic side clips of the connector until it snaps into place.

 *Note: The connector can be difficult to secure inside the housing—use care to avoid damage.*

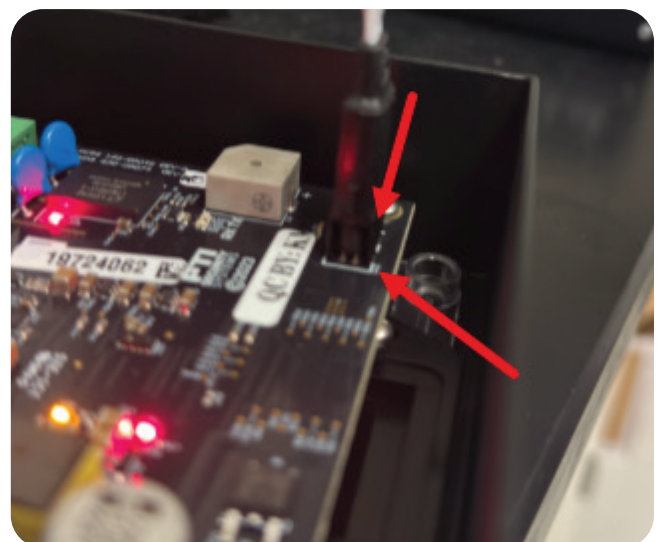

### 3. Power On the Flasher

- Hold the Power button on the Seggar Flasher until the screen turns on and displays “Ready.”



### 4. Initiate the Firmware Upgrade

- Press the Program (“Prog”) button to begin the update process.
- The display will show the following sequence - Erasing > Verifying > OK (Complete)



### 5. Verify the Firmware Version

- Disconnect the 10-pin connector from the AP1.
- On the AP1 keypad, press \* then # to display the current firmware version.
- Confirm that the firmware version matches the latest (e.g., 1.06.02 as shown below).



### 6. Reassemble and Return

- Close the faceplate and securely tighten the captive screws.
- Repack the Segger Flasher Portable Plus in its case.

#### RETURN THE UNIT TO:

**PTI Security Systems  
Attn: Nathan Davenport  
1000 Cobb Place Blvd NW, Suite 100  
Kennesaw, GA 30144 USA**

# PTI SECURITY SYSTEMS

# ASSA ABLOY

SHAPING THE INDUSTRY  
SINCE 1979

With PTI Security Systems, operators can easily customize all of their facility's access areas, review site activity, and monitor zones and alarms from one cloud-based account. Create a world-class operation with the most advanced enterprise access control solution from the trusted industry leader with over 40 years of experience.

Since 1979, PTI Security Systems™ has provided the self-storage industry with proven security and access control systems. Known for our complete and innovative solutions that deliver advanced and cost-effective security systems, self-storage owners and operators can efficiently manage their facility from anywhere, lower operating costs, and enhance the tenant experience.

For more information about PTI Security Systems, please contact a PTI representative or visit our website.

PTI is a trademark of Preferred Technology Systems, LLC

 [ptisecurity.com](https://ptisecurity.com)

 [sales@ptisecurity.com](mailto:sales@ptisecurity.com)

 800.523.9504